BELT CONNECTOR - 2000

ASSEMBLYINSTRUCTIONS







BELT PIN

2

PIN BELT HOLDER

BELT

TIPIN BELTHOLD









Push completely into Belt Holder and tap head of Belt Pin firmly until Belt Pin snaps into lock position.for



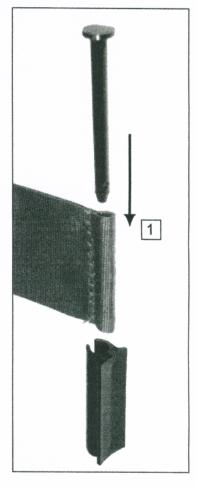

Assembly Completed

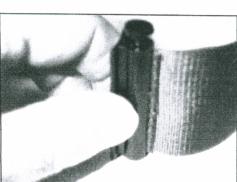

TO UNASSEMBLE

Tap end of Belt Pin on hard surface to unlock Pin from Belt Holder



Matel Manufacturing Inc. CUSTOMER SERVICE 800 217 7606 Form # 2000 - 1