

INSTRUCTIONS TO REPLACE SECURITY CABLE & PEN

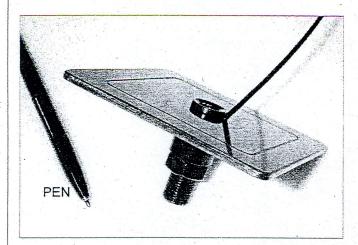

SECURITY CABLE SECURITY CABLE CLIP SPACER

VIEW #1 Fully assembled (Unit must be removed from counter) to access Connector Nut

VIEW #2 Connector Nut must be unscrewed to disassemble unit in order to remove security cable wth security clip

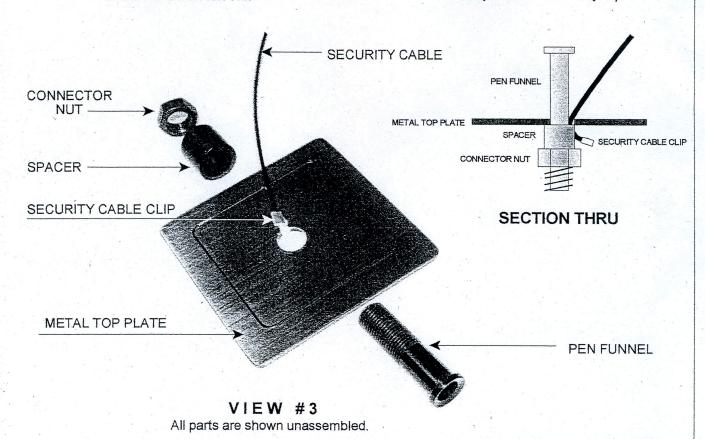



File: C:\Desktop\ShopDrwgs\Assembly